

Overzicht lichtnetapparaten

Overzicht lichtnetapparaten								
Artikel nr.	Model	Spanning max / Volt	Spanning bij 500 Ohm	Laad energie in Joule	Impuls energie in Joule	Stroomverbruik in Watt	Afrasteringslengte CEE in KM	Normale afrasteringslengte
09-080	ESM 400	10000	800	0.11	0.035	1.00	5	1.0
09-120	ESM 402	10000	5800	1.40	1.14	6.40	12	2.5
09-121	ESM 602	10000	6100	2.50	1.78	8.40	20	3.5
09-122	ESM 902	10000	6500	5.40	2.37	14	35	11
09-101	ESM 1100	10000	6700	3.20	2.40	5	30	7
09-106	ESM 2200	10000	7000	7.50	5.50	10	40	15
09-111	ESM 3300	10000	7000	12.6	9.00	20	50	25
09-116	ESM 4400	10000	7000	16.8	11.0	25	65	34

Overzicht Batterijapparaten

Overzicht batterijapparaten								
Artikel nr.	Model	Spanning max / Volt	Spanning bij 500 Ohm	Laad energie in Joule	Impuls energie in Joule	Stroomverbruik in Watt	Afrasteringslengte CEE in KM	Normale afrasteringslengte
08-015	ESB 15	8300	500	0.05	0.04	20 mA	1	0.5
08-065	ESB 120	8000	1000	0.12	0.10	8-15 mA	2	1
08-075	ESB 125	8500	1400	0.15	0.12	9-19 mA	4	2
08-080	ESB 135	8000	1800	0.23	0.18	15-30 mA	6	3
08-085	ESB 145	7600	2900	0.50	0.38	20-75 mA	10	5

Overzicht Accuapparaten

Overzicht accu apparaten								
Artikel nr.	Model	Spanning max / Volt	Spanning bij 500 Ohm	Laad energie in Joule	Impuls energie in Joule	Stroomverbruik in Watt	Afrasteringslengte CEE in KM	Normale afrasteringslengte
08-055	ESB 55	8500	2000	0.24	0.18	0.05	6	3
08-100	ESB 200	8000	3700	1.60	1.10	0.14	30	8
08-102	ESB 225	8000	3700	1.60	1.10	0.14	30	8
08-106	ESB 275	8200	4900	2.00	1.50	0.16	45	10
08-109	ESB 325	8600	5000	2.80	2.00	0.30	50	16
08-111	ESB 375	8600	5000	5.60	4.00	0.60	180	30

Agri-Shop Prolako

Tel. + 31 (0) 516 492 202

Reparatie, onderhoud & Inruil van uw Rutland apparaat.